



RONDELLE
BAGUE ENTRETOISE

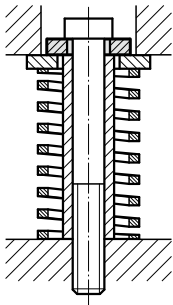

Exemple de montage



244.10.

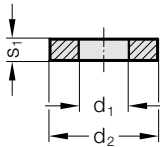

Matière :
 C 45 trempée et revenue

244.10. Rondelle


d ₁	d ₂	s ₁	d ₁	d ₂	s ₁	d ₁	d ₂	s ₁	d ₁	d ₂	s ₁
6,4	17	3	13	35	8	21	44	8	26	58	6
8,4	17	3	13	46	8	21	45	8	26	70	12
8,4	23	4	13,4	23	4	21	45	16	26	80	12
8,5	20	4	16,4	26	4	21	46	6	31	68	8
9	26	4	17	35	4	21	49	6	31	68	10
10,5	25	4	17	35	6	21	50	10	31	80	12
10,5	25	5	17	36	4	21	65	8	31	100	15
10,5	26	4	17	36	13	21	70	12	32	90	15
10,5	28	4	17	37	6	22	65	12	32	92	15
10,5	30	5	17	38	6	22	68	12	37	80	8
11	30	6	17	40	6	25	46	10	43	92	8
11	36	6	17	50	6	25	55	10			
12,5	28	4	17	50	10	25	56	10			
13	30	5	17	58	10	25	65	12			
13	35	5	20,4	30	5	25	70	10			
13	30	6	21	42	8	25	90	12			

Exemple de commande :


Rondelle	=	244.10.
Diamètre intérieur d ₁	6,4 mm	= 064.
Diamètre extérieur d ₂	17 mm	= 017.
Épaisseur s ₁	3 mm	= 03
N° de commande	=	244.10. 064.017.03



 Exemple de montage



244.11.

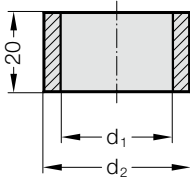

Matière :
 St 35.4 trempée en surface

244.11. Bague entretoise

ø du ressort	20 25	32 40
d ₁	20	30
d ₂	25	38
Code de commande	25	40

Exemple de commande :

Bague entretoise	=	244.11.
Code de commande Diamètre	40 mm	= 40
N° de commande	=	244.11. 40