



GAS SPRING, STANDARD MOUNTING VARIATIONS


2480.007.03000

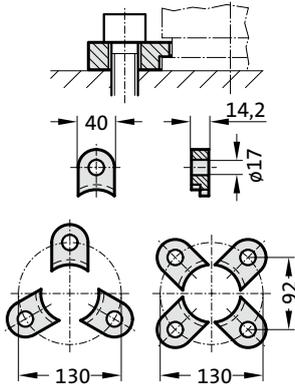


2480.008.03000³⁾

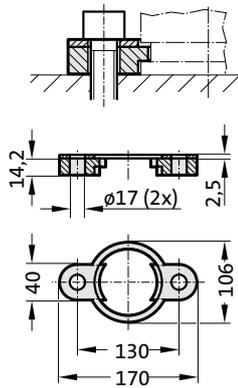


2480.010.03000.140³⁾
2480.010.03000.215*³⁾

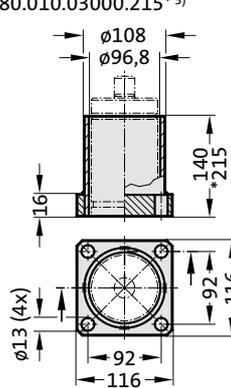


2480.011.03000

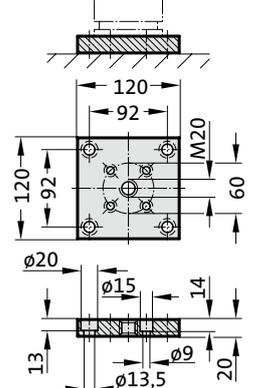


2480.011.03000.2

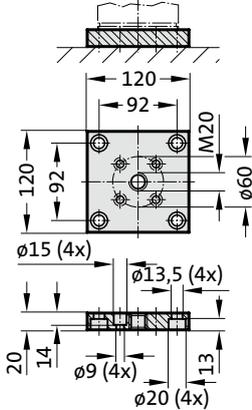


2480.022.03000

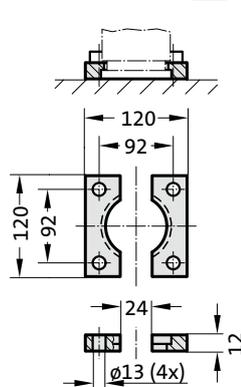


2480.044.03000²⁾

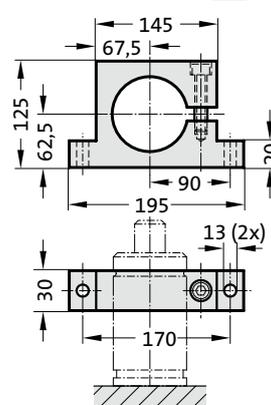


2480.044.03.03000²⁾

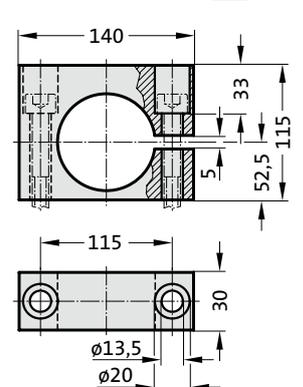


2480.045.03000²⁾

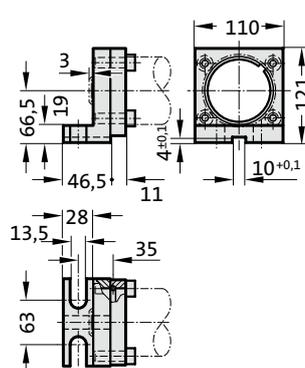


2480.047.03000²⁾

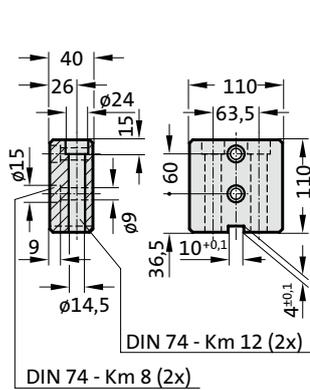


2480.055.03000

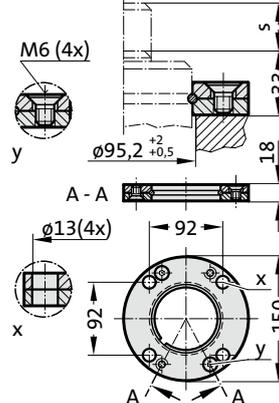

2480.057.03000

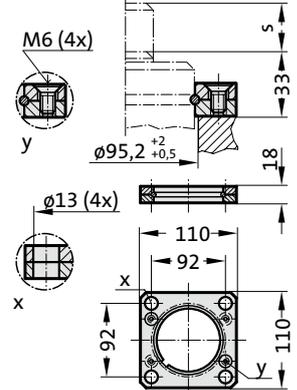

2480.064.03000⁴⁾

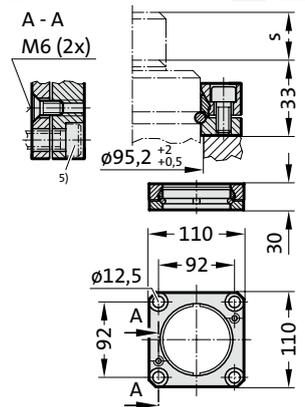

Note:

- ²⁾ Attention:
The spring force must be absorbed by the stop Surface!
- ³⁾ Not for use with composite connection.
- ⁴⁾ Square collar flange, non-rotating, fixing for composite connection.
- ⁵⁾ Machine screws with hexagonal socket (compact head recommended)