



Sprężyna gazowa POWERLINE

Warianty mocowania


2480.007.01500

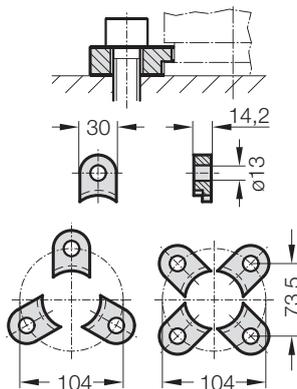


2480.008.01500³⁾

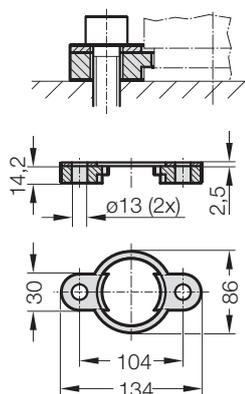


2480.010.01500.130³⁾
2480.010.01500.205³⁾

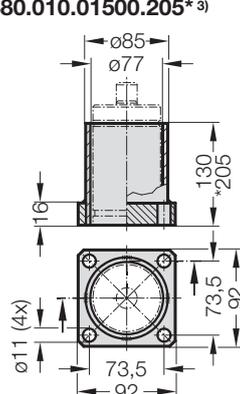


2480.022.01500

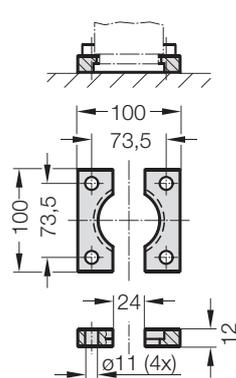


2480.044.01500²⁾

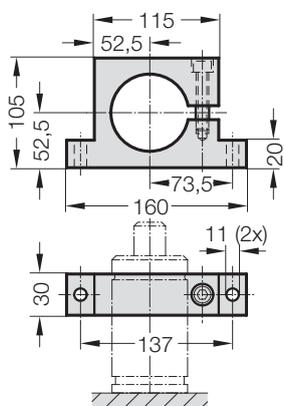


2480.044.03.01500²⁾

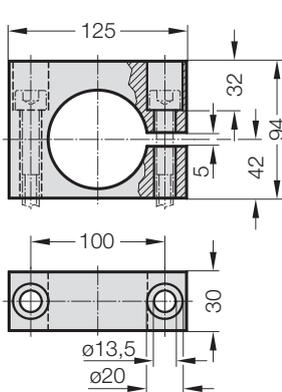


2480.045.01500²⁾

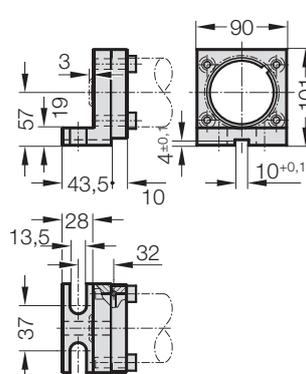


2480.047.01500²⁾

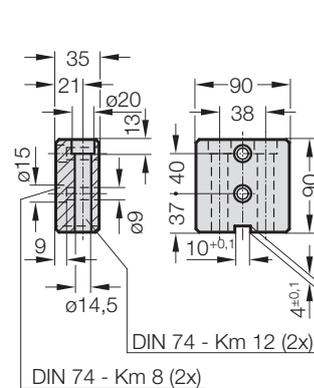


2480.055.01500

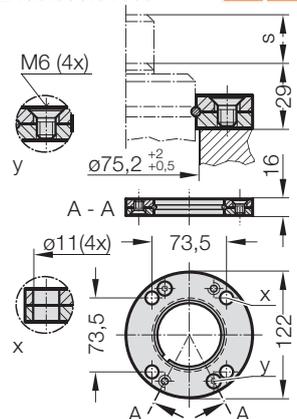

2480.057.01500

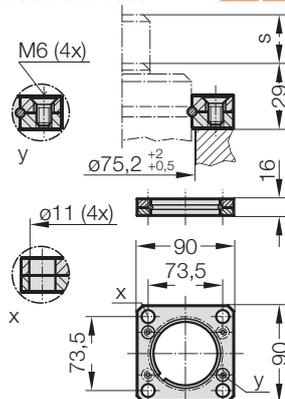

2480.064.01500⁴⁾

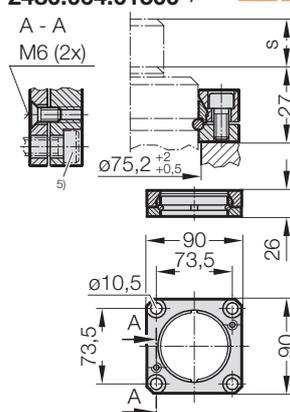

Uwaga:

²⁾ Uwaga:

Siła sprężyny musi być absorbowana przez powierzchnię dolną cylindra!

³⁾ Nie można stosować przy połączeniu w sieć.

⁴⁾ Czworokątny kołnierz oporowy, zabezpieczony przed obrotem, mocowanie do przyłącza sieciowego.

⁵⁾ Śruby z łbem walcowym o gnieździe sześciokątnym (zalecane: z niewielkim łbem).