



VODICÍ ČEPY PODLOŽKA PRO ELASTOMERY

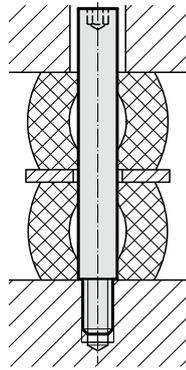

Příklad montáže



244.5.

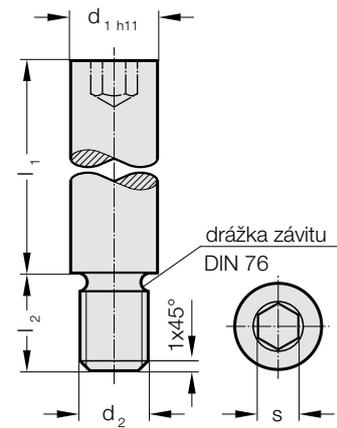

Materiál:

C 15

244.5. Vodící čepy


d_1	6	8	10	13	16	20	25
d_2	M4	M6	M8	M10	M12	M16	M20
l_2	6	9	15	15	18	25	30
s	3	4	5	6	8	10	14
l_1							
20	•	•	•				
25	•	•	•				
32	•	•	•	•	•		
40	•	•	•	•	•		
50		•	•	•	•	•	•
63			•	•	•	•	•
80				•	•	•	•
95				•	•	•	•
118					•	•	•
140					•	•	•
180					•	•	•

Příklad objednávky:


Vodící čepy	=	244.5.
Jmenovitý průměr d_1	16 mm =	16.
Délka vedení l_1	40 mm =	040
Objednávací číslo	=	244.5. 16.040



Příklad montáže

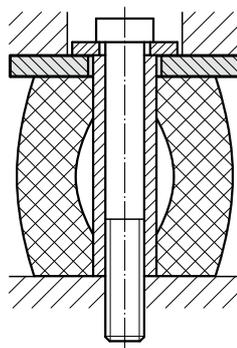

244.6.

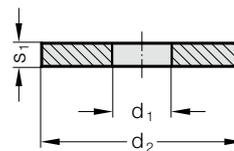

Materiál:

St 37

244.6. Podložka pro elastomery

Pružina ϕ	25	32	40	50	63	80	100	125
d_1	10,5	13,5	13,5	16,5	16,5	20,5	20,5	26
d_2	32	40	50	60	80	100	120	150
s_1	4	5	5	6	8	10	12	15

Příklad objednávky:

Podložka pro elastomery	=	244.6.
Průměr pružiny Pružina ϕ	63 mm =	063
Objednávací číslo	=	244.6. 063